

# Disc Locks User Manual

## Fitting Size

- Brake disc thickness less than 6mm (1/4")
- Locking pin size: 6mm (1/4"), 10mm (3/8"), 14mm (9/16")



## Keys

There are 3 keys and 1 flat coded tag with the serial number (2 letters + 6 numbers i.e kk123456). Keys could be reordered by the serial number. Please keep the serial number in a safe place.




## How to lock

- Insert key and rotate clockwise, the lock barrel will spring out.
- Slide the lock on you motorcycle's front or rear brake disc.
- Locate a hole in the brake-disc to allow the locking pin to pass through and push the key barrel down to lock up.

## Arming KD 6 / KDS 6 / KAL 6 / KAZ 10 / KS 6 / KNL 6 / KAS 15 alarm

- To lock up the device, please refer to 'How to lock' section.
- To activate the alarm function:  
Push down the key-barrel fully. The alarm sensor will generate 1 beep to confirm that it is activated.
- To deactivate the alarm function:  
Push down the key-barrel halfway, release when hear 1 beep. Then, push it down fully in the second press. The alarm sensor will generate 2 beeps to confirm that it is deactivated.

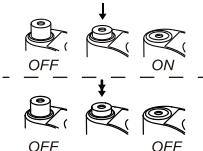

- If the lock is attacked, the alarm sensor rings continuously for 10 seconds.
- You may stop the alarm by unlocking the key-barrel.

## Arming KAL 10 / KAL 14 alarm

- To lock up the device, please refer to 'How to lock' section.
- The alarm sensor will automatically activate once locked on the brake disc. The alarm sensor will generate 1 beep to confirm that it is activated.
- To deactivate the alarm function, re-slide lock on to disc. The alarm sensor will generate 2 beeps to confirm that it is deactivated.




- If the lock is attacked, the alarm sensor rings continuously for 10 seconds.
- You may stop the alarm by unlocking the key-barrel.


## Replacing Battery:

- Insert the key and rotate clockwise, the key barrel will spring out.
- Remove the hex screw inside the lock body.
- Take out the battery compartment.
- Open the battery cover.
- Replace the CR2 lithium battery.
- Close the cover securely and reassemble the parts.


### KAS 15:

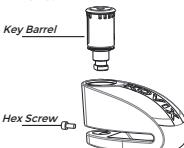

### KD 6 / KDS 6:

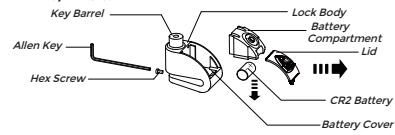


### KAL 6 / KAZ 10:

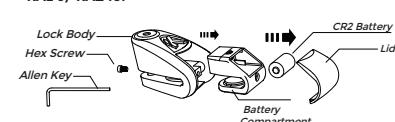


## Recharging Battery:

- Insert the key and rotate clockwise, the key barrel will spring out.
  - Remove the hex screw inside the lock body.
  - Take out the battery compartment.
  - Open the USB port cover.
  - Recharge using the mini USB cable.
  - The LED light flashes blue when charging, off once the charging process is completed.
- \* Please recharge every 3 months to maintain the functionality of alarm and battery.
 
### KS 6:



### KNL 6:

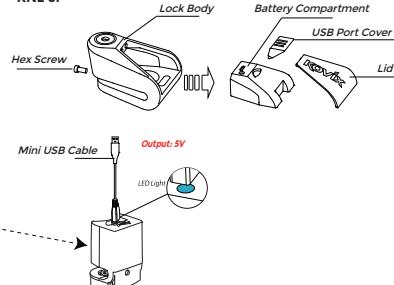

**WARNING: Please avoid close proximity to ears. The extremely loud alarms may harm your hearing.**

## Troubleshooting

Alarm not working:  
Check the battery and ensure your lock is in alarm mode.

Lock making a constant sound:  
Replace the battery.

When the alarm ring continuously,  
broke off and gave a beep warning sound:  
Replace the battery.

Replace the battery.

## Warranty:

We provide a one-year manufacturer's warranty from the date of purchase for all KOVIX products, if:

- The module is destroyed by non-man-made damage
  - The mechanical part is destroyed by non-man-made damage
- We do not provide warranty for damage of surface appearance.

## Warranty card

Purchaser:

Phone:

Key number and Model:

Date of purchase:

Address: